

# Preface

ASM (Aquifer Simulation Model) is a complete implementation of a 2-D groundwater model for use on a PC under MS-Windows(tm). It was originally developed as a tool for the education of students in the hydrogeology, civil and environmental engineering. The first version of ASM was published in 1989 and ran under MS-DOS.

Since that time ASM has been continually enhanced and improved.

This users manual documents the latest and most powerful version 6.0 of ASM which runs under the Microsoft Windows(tm) operating system. The most notable change in this version is the use of a new, friendly graphical user interface which replaces the character oriented interfaces of previous versions.

At the same time, ASM-6.0 allows the manipulation of larger model grids which makes it suitable for professional use. It is hoped that this very user-friendly implementation of a groundwater model on Windows(tm) PCs will lower the threshold which inhibits the widespread use of computer based groundwater models. Its ease of use allows getting acquainted with the properties and peculiarities of groundwater flow and transport paths by experimenting with the models by changing relevant parameters.

Readers unfamiliar with the theoretical background of groundwater hydraulics and groundwater modelling are referred to the textbooks listed in the references section of this manual

## Acknowledgments

We are very grateful to Astrid Besmehn, Dirk Brehm, Walter Obermiller and Sara Vassolo for their contributions in checking and validating various parts of this software.

Hamburg  
Zürich  
Stuttgart

Wen-Hsing Chiang  
Wolfgang Kinzelbach  
Randolf Rausch

March 1998

## 1. Introduction

Aquifer Simulation Model for Windows (ASMWIN) implements a complete two-dimensional groundwater flow and transport model. This new model is a strongly enhanced Windows-version of ASM 5.0, which runs under MS-DOS (Kinzelbach & Rausch, 1995). ASMWIN comes with a professional graphical user-interface, a finite-difference flow model, a tool for the automatic calibration of a flow model, a particle tracking model, a random walk transport model, a finite-difference transport model and several other useful modeling tools.

The graphical user-interface allows you to create and simulate models with ease and fun. It can handle models with up to  $150 \times 150$  cells and 1000 time periods (pumping intervals). ASMWIN can create contour maps or solid fill plots of input data and simulation results. Solid Fill can utilize the full range of RGB colors to fill cells with different values. Contours can be added to these plots. Report-quality graphics may be saved to a wide variety of file formats, including SURFER, DXF, HPGL and BMP (Windows Bitmap).

The discretized flow equations are solved by the preconditioned conjugate gradient (PCG) method (module ASMSIM1) with the choice of diagonal and Cholesky preconditioning. For steady state flow fields, an automatic model calibration procedure using the Marquardt-Levenberg algorithm is available in the module ASMOPTI.

The particle tracking module ASMPATH offers several velocity interpolation methods and uses Euler-Integration to compute flow paths and travel times. ASMPATH allows you to perform particle tracking with just a few mouse clicks. Both forward and backward particle tracking schemes are feasible for steady-state and transient flow fields. ASMPATH calculates and shows pathlines or flowlines and travel time marks simultaneously. It provides various on-screen graphical options including head contours, drawdown contours, and velocity vectors.

Two transport simulation modules are available. The first uses a finite-difference scheme (Module ASMT2SIM) while the second uses a random-walk method based on Ito-Fokker-Planck theory (Module ASMWALK).

The modeling tools include a **Result Extractor**, a **Field Interpolator**, a **Field Generator**, a **Water Budget Calculator** and a **Graph Viewer**.

The **Result Extractor** allows the user to extract simulation results from any period to a spread sheet. You can then view the results or save them in ASCII or SURFER-compatible data files. Simulation results include hydraulic heads, drawdowns, Darcy velocities, leakage terms and concentrations.

The **Water Budget Calculator** not only calculates the budget of user-specified zones but also the exchange of flows between such zones. This facility is very useful in many practical cases. It allows the user to determine the flow through a particular boundary.

The **Field Generator** generates fields with heterogeneously distributed transmissivity or hydraulic

conductivity values. It allows the user to statistically simulate effects and influences of unknown small-scale heterogeneities. The **Field Generator** is based on Mejía's (1974) algorithm.

The **Graph Viewer** displays temporal development curves of simulation results including hydraulic heads, drawdowns and concentrations.

## System Requirements

### Hardware

Personal computer running Microsoft Windows 3.1x, Windows 95 or Windows NT  
8 MB of available memory (16MB or more are recommended)  
A CD-ROM drive and a hard disk.  
VGA or higher-resolution monitor  
Microsoft Mouse or compatible pointing device

### Software

A FORTRAN compiler is required if you intend to modify and compile the modules ASMSIM1, ASMT2SIM, ASMWINMC and ASMOPTI.

## Setting Up ASMWIN

You install ASMWIN on your computer using the program SETUP.EXE contained on the CD. The setup program installs ASMWIN and other program components from the distribution CD to your hard disk.

---

Note that you cannot simply copy files to your hard disk and run ASMWIN. You must use the setup program to decompress and install the files in the appropriate directories.

---

After installing ASMWIN, you should add the following entries to the configuration file (CONFIG.SYS or CONFIG.NT) and reboot your computer.

### For DOS/Windows 3.1x:

Configuration file: C:\CONFIG.SYS  
FILES=80  
DEVICE=C:\DOS\ANSI.SYS

### For Windows 95

Configuration file: C:\CONFIG.SYS  
FILES=80  
DEVICE=C:\WINDOWS\COMMAND\ANSI.SYS

**For Windows NT**

Configuration file: C:\WINNT\SYSTEM32\CONFIG.NT

FILES=80

DEVICE=C:\WINNT\SYSTEM32\ANSI.SYS

Note that you should change the paths indicated above (C:\DOS, C:\WINDOWS or C:\WINNT) if you have installed the operating systems in other directories.

**Online Help**

The online help system references nearly all aspects of ASMWIN. You can access Help through the Help menu Contents command, by searching for specific topics with the Help Search tool, or by pressing F1 to get context sensitive Help on the ASMWIN modeling environment.

**Help Search**

The fastest way to find a particular topic in **Help** is to use the **Search** dialog box. To display the Search dialog box, either choose Search from the Help menu or click the Search button on any **Help** topic screen.

**To search Help**

1. From the **Help** menu, choose **Search**. (You can also click the **Search** button from any **Help** topic window).
2. In the **Search** dialog box, type a word, or select one from the list by scrolling up or down. Press ENTER or choose Show Topics to display a list of topics related to the word you specified.
3. Select a topic and press ENTER or choose Go To to view the topic.

**Context-Sensitive Help**

Many parts of the ASMWIN Help facility are context-sensitive. Context-sensitive means you can access help on any part of ASMWIN directly by clicking the Help button.

**Updates**

Today the development of groundwater modeling techniques is progressing very rapidly, and a groundwater model must periodically be updated and expanded. For updates of ASMWIN and our other software you may access the following web-pages on the Internet:

[http://ourworld.compuserve.com/homepages/W\\_H\\_Chiang/](http://ourworld.compuserve.com/homepages/W_H_Chiang/)

<http://www.baum.ethz.ch/ihw/soft/welcome.html>


## 2. Your First Groundwater Model with ASMWIN

It takes just a few minutes to build your first groundwater flow model with ASMWIN. First, create a new groundwater model by choosing **New Model** from the **File** menu. Next, determine the size of the model grid by selecting **Mesh Size** from the **Grid** menu. Then, specify the geometry of the model and set the model parameters, such as hydraulic conductivity, effective porosity etc.. Finally, perform the flow simulation by choosing **Flow Simulation** from the **Run** menu. After completing the flow simulation, you can use the modeling tools provided by ASMWIN to view the results, to calculate water budgets of particular zones, or graphically display the results, such as head contours. You can also use ASMPATH to calculate and save pathlines or use the Random Walk or finite difference transport model to simulate transport processes.

This chapter provides an overview of the modeling process with ASMWIN, describes the basic skills you need to use ASMWIN, and takes you step by step through the sample model. A complete reference of all menus and dialog boxes in ASMWIN is contained in Chapter 3. The transport models and the modeling tools are described in Chapter 4 and Chapter 5, respectively.

### The Sample Problem

The configuration of the sample problem is shown in Fig. 2.1. An aquifer is bounded by no-flow boundaries on the North and South sides. The West and East sides are constant-head boundaries. The hydraulic heads on the west and east boundaries are 9 m and 8 m above reference level, respectively.

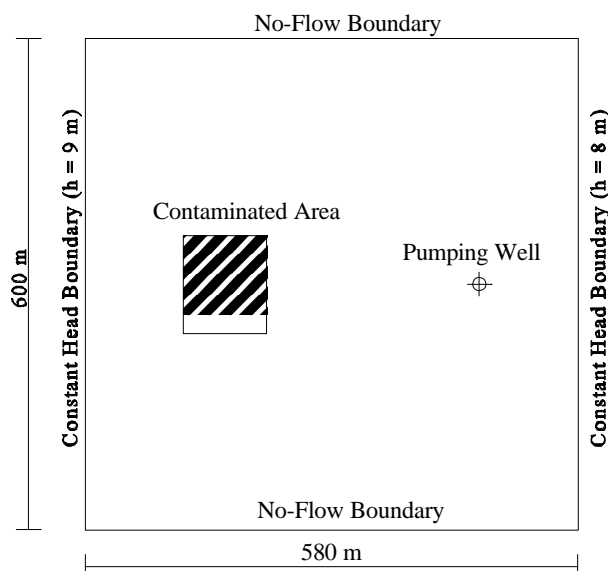

**Fig. 2.1** Configuration of the sample problem

The aquifer is assumed to be isotropic, unconfined with a hydraulic conductivity of 0.0005 m/s. The effective porosity is 15 percent. The elevations of the top and bottom of the aquifer are 10 m and -3 m, respectively. A contaminated area lies next to its western boundary. The task is to

isolate the contaminated area using a pumping well located next to the eastern boundary.

A numerical model has to be developed for this site to calculate the required pumping rate of the well. The pumping rate must be high enough, so that the contaminated area lies within the capture zone of the pumping well. We will use ASMWIN to construct the numerical model and use ASMPATH to compute the capture zone. Based on the calculated groundwater flow field, we will use ASMWALK (Random Walk method) and ASMT2SIM (finite-difference scheme) to simulate the contaminant transport. Finally, we will show how to use ASMOPTI to calibrate the model automatically.

## Starting ASMWIN

The ASMWIN Setup program automatically creates a new program group and new program items for Aquifer Simulation Model in Windows. You are ready to start ASMWIN from Windows by clicking the ASMWIN icon.

- ▶ **To start ASMWIN from Windows**
- double-click the Aquifer Simulation Model icon.

When you start ASMWIN, you see the interface of ASMWIN with a Menu bar and a tool bar. The tool bar contains an **Open Model** icon, you can click this icon to open a model.

## 2.1 Run a Steady-State Flow Simulation

Four main steps must be performed in a steady-state flow simulation:

1. Create a new model
2. Assign model data
3. Perform the flow simulation
4. Check simulation results and produce output.


### Step 1.: Create a New Model

The first step in running a flow simulation is to create a new model.

- ▶ **To create a flow model**
- 1. choose **New Model** from the **File** menu. A **New Model** dialog box appears. Select a directory for the model data, such as C:\ASMWIN\EXAMPLES\SAMPLE, and type the file name SAMPLE for the sample model. An ASMWIN model must always have the file extension ASM. It is recommended to save every model in a separate directory, where the model and its output data will be kept. This also allows to run several models simultaneously (multitasking). If a desired directory for saving a new model is not available, use the Windows File Manager, Explorer or other utilities to create the directory.
- 2. Click OK.  
ASMWIN takes only a few seconds to create the new model. The name of the new model is shown in the title bar.

### Step 2.: Assign Model Data

The second step in running a flow simulation is to generate the model grid (mesh), specify boundary conditions, and assign model parameters to the model grid. In ASMWIN, every aquifer system is represented by a discretized domain consisting of an array of nodes and associated finite difference cells. Fig. 2.2 shows a spatial discretization of an aquifer system with a mesh of cells and nodes at which hydraulic heads are calculated. The nodal grid forms the framework of the numerical model. The thicknesses of each model cell and the width of each column and row may be variable. The locations of cells are described in terms of columns and rows. ASMWIN uses an index notation [I, J] for locating the cells. For example, the cell located in the 5th column and 8th row is denoted by [5, 8].

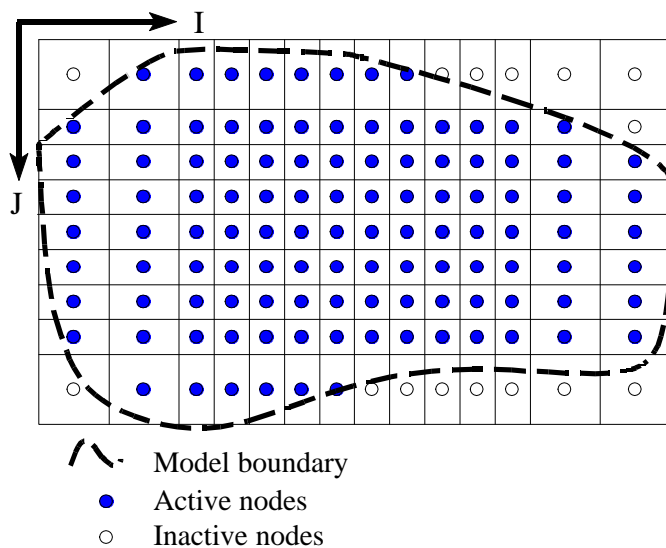

**Fig. 2.2** Spatial discretization of an aquifer system and the cell indices

#### ► To generate the model grid

1. Choose **Mesh Size** from the **Grid** menu.  
The **Model Dimension** dialog box appears (Fig. 2.3)
2. Enter 30 for the number of columns and rows, and 20 for the size of columns and rows.
3. Click **OK**.

ASMWIN changes the pull-down menus and shows the generated model grid (Fig. 2.4). ASMWIN allows you to shift or rotate the model grid, change the width of each model column or row, or to add/delete model columns or rows. For our sample problem, you do not need to modify the model grid. See section 3.1 for more information about the Grid Editor.


4. Choose **Leave Editor** from the **File** menu or click the Leave Editor icon 

The next step is to specify the type of aquifer.


#### ► To assign the type of aquifer

1. Choose **Aquifer Type** from the **Grid** menu.  
An **Aquifer Options** dialog box appears.
2. Select **Unconfined** as the aquifer type.


3. Type 1 for the anisotropy factor.
4. Click OK.

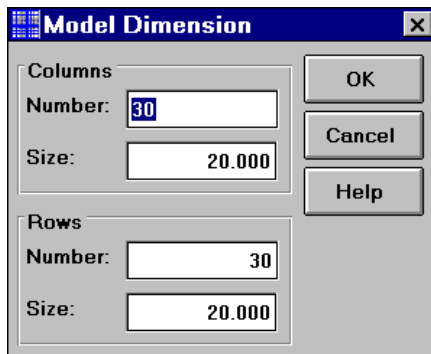

**Fig. 2.3** The **Model Dimension** dialog box

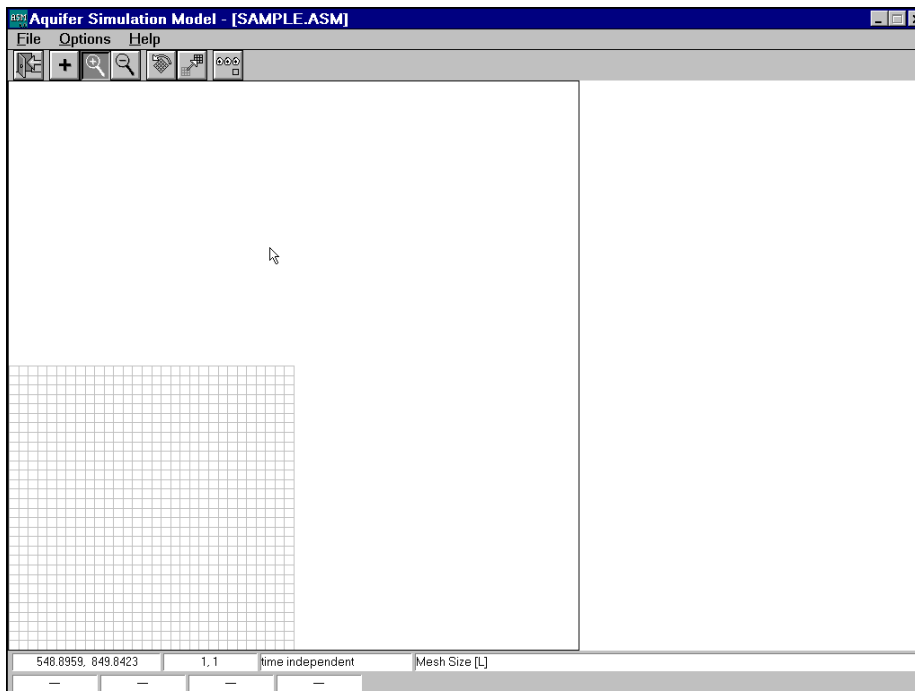

**Fig. 2.4** The generated model grid

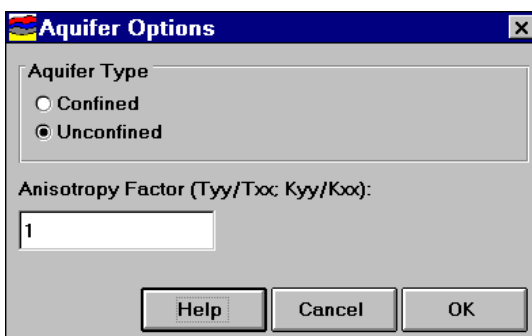



**Fig. 2.5** The **Aquifer Options** dialog box

Now, you must specify the boundary conditions of the flow model. You specify a code for each model cell which indicates whether (1) the hydraulic head is computed (active variable-head cell or active cell), (2) the hydraulic head is kept fixed at a given value (constant-head cell), or (3) no flow takes place within the cell (inactive cell). It is suggested to use 1 for an active cell, -1 for a constant-head cell, and 0 for an inactive cell. For the sample problem, we need to assign -1 to the cells on the west and east boundaries and 1 to all other cells.

► **To assign the boundary condition to the flow model**


1. Choose **Boundary Conditions ► Flow Model** from the **Grid** menu.  
ASMWIN displays a plan view of the model grid (Fig. 2.6). The grid cursor is located in the cell [1, 1], i.e., the upper-left cell. The value of the current cell is shown at the bottom of the status bar. The default value is 1. The grid cursor can be moved horizontally by using the arrow keys or by clicking the mouse on the desired position.


Note that a DXF-map is loaded by using the Maps Options. See Chapter 3 for details.

2. Pressing the *right* mouse button, ASMWIN shows a **Cell Value** dialog box.
3. Type -1 in the dialog box, then click **OK**.  
The upper-left cell of the model has been specified to be a constant-head cell.
4. Now turn on duplication by clicking the **duplication** icon .  
The small box on the lower-right corner of this icon will be highlighted. The current cell value will be duplicated to all cells passed over by the grid cursor, if it is moved while duplication is on. You can turn off duplication by clicking the **duplication** icon again.
5. Move the grid cursor from the upper-left cell [1, 1] to the lower-left cell [1, 30] of the model grid.  
The value of -1 is duplicated to all cells on the west side of the model.
6. Move the grid cursor to the upper-right cell [30, 1] by a mouse click.
7. Move the grid cursor from the upper-right cell [30, 1] to the lower-right cell [30, 30].  
The value of -1 is duplicated to all cells on the east side of the model.
8. Choose **Leave Editor** from the **File** menu or click the **Leave Editor** icon .

The next step is to specify the geometry of the model.


► **To specify the elevation of the top of the aquifer**

1. Choose **Aquifer Top** from the **Grid** menu.  
ASMWIN shows the model grid.
2. Choose **Matrix►Reset** from the **Value** menu (or press Ctrl+R).  
A **Reset Matrix** dialog box appears.
3. Enter 10 into the dialog box, then click **OK**.  
The elevation of the top of the aquifer is set to 10.
4. Choose **Leave Editor** from the **File** menu or click the **Leave Editor** icon .
5. An externally prepared matrix can be imported by means of **Matrix Browse** (refer to chapter 3.3.7).
6. For better orientation a map overlay prepared externally can be displayed on top of the model grid (refer to chapter 3.3.8).

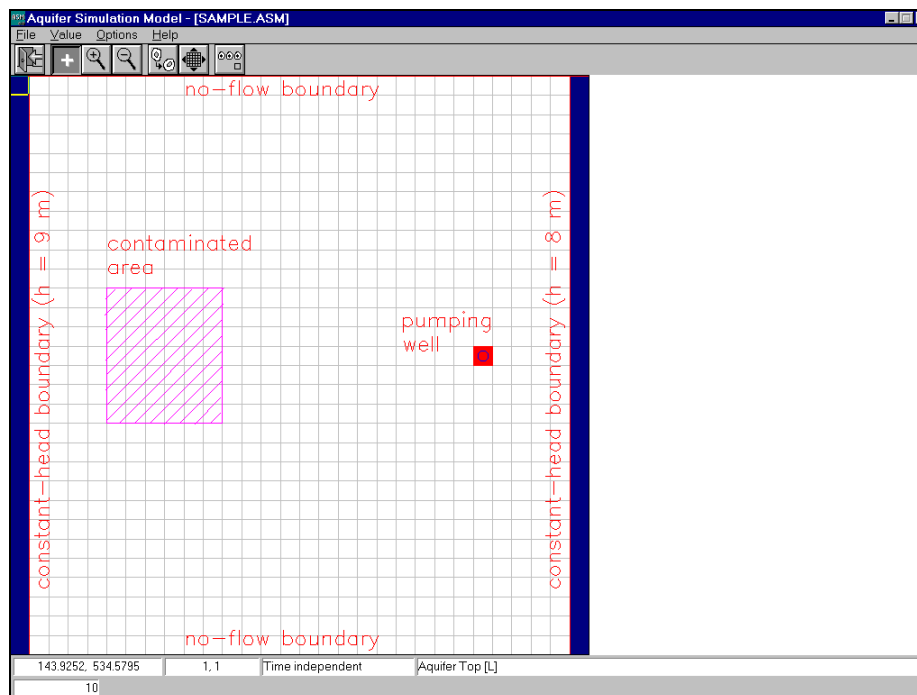

**Fig. 2.6** Top view of the model grid. Model data are assigned to each cell.

► **To specify the elevation of the bottom of the aquifer**

1. Select **Aquifer Bottom** from the **Grid** menu.
2. Repeat the same procedure as described above to set the bottom of the aquifer to -3.
3. Choose **Leave Editor** from the **File** menu or click the Leave Editor icon 



Now, we are going to specify the temporal and spatial parameters of the model. The spatial parameters for the sample problem include the initial hydraulic head, hydraulic conductivity and effective porosity.

► **To specify temporal parameters**


1. Choose **Time** from the **Parameters** menu.  
A **Time Parameters** dialog box appears. The temporal parameters include the time unit and the numbers of stress periods and time steps. In ASMWIN, the simulation time is divided into stress periods - i.e., time intervals during which all external excitations or stresses are constant - which are, in turn, divided into time steps. The length of a stress period is not relevant to a steady state flow simulation.
2. Click **OK** to accept the default values.

► **To specify the initial hydraulic head**


1. Choose **Starting Values**►**Hydraulic Heads** from the **Parameters** menu.  
ASMWIN displays the model grid. Now, you can specify the initial hydraulic head for each model cell. The initial hydraulic head at a constant-head boundary will be kept constant during the flow simulation. The other heads are starting values in the time-varying simulation or first guesses for the iterative solver in a steady-state simulation. Here we set all values to

- 8 first and then correct the values on the west side by overwriting them with a value of 9.
2. Choose **Matrix►Reset** from the **Value** menu (or press Ctrl+R) and enter 8 in the dialog box, then click **OK**.
  3. Move the grid cursor to the upper-left model cell.
  4. Press the *right* mouse button and enter 9 into the Cell Value dialog box, then click **OK**.
  5. Now turn on duplication by clicking the duplication icon .  
The small box on the lower-right corner of this icon will be highlighted. The current cell value will be duplicated to all cells passed over by the grid cursor, if it is moved while duplication is on.
  6. Move the grid cursor from the upper-left cell to the lower-left cell of the model grid.  
The value of 9 is duplicated to all cells on the west side of the model.
  7. Choose **Leave Editor** from the **File** menu or click the Leave Editor icon .

► **To specify the hydraulic conductivity**


1. Choose **Hydraulic Conductivity** from the Parameters menu.
2. Choose **Matrix►Reset** from the **Value** menu (or press Ctrl+R) and type 0.0005 in the dialog box, then click **OK**.
3. Choose **Leave Editor** from the **File** menu or click the Leave Editor icon .

► **To specify the effective porosity**

1. Choose **Effective Porosity** from the **Parameters** menu.
2. Choose **Matrix►Reset** from the **Value** menu (or press Ctrl+R), enter 0.15, then click **OK**.
3. Choose **Leave Editor** from the **File** menu or click the Leave Editor icon .

The last step before the actual flow simulation is to specify the location of the pumping well and its pumping rate. In ASMWIN, an injection or pumping well is represented by a node (or a cell). The user specifies an injection or pumping rate for each node. It is implicitly assumed that the well penetrates the full thickness of the aquifer. As we do not know the pumping rate required for capturing the contaminated area shown in Fig. 2.1, we will try a pumping rate of 0.002 m<sup>3</sup>/s.

► **To specify the pumping well and the pumping rate**

1. Choose **Wells** from the **Packages** menu.
2. Move the grid cursor to the cell [25, 15]
3. Press the right mouse button and type -0.002, then click **OK**. Note that a negative value is used to indicate a pumping well and a positive value to indicate an injection well.
4. Choose **Leave Editor** from the **File** menu or click the Leave Editor icon .

### Step 3.: Perform the Flow Simulation

Now everything is ready to run the flow simulation.


► **To perform the flow simulation**

1. Select **Run** menu and choose **Flow Simulation**.  
The **Flow Simulation** dialog box appears (Fig. 2.7). It allows the user to specify the convergence criteria for the iterative equation solver. Whether the accuracy of a simulation

is sufficient can be checked with the water balance.

2. Click **OK** to start the flow computation.

Prior to running the flow simulation, ASMWIN will use user-specified data to generate an input file for the simulation program ASMSIM1.EXE. In addition, ASMWIN creates a batch file ASMSIM.BAT in the model directory. After having generated the files, ASMWIN automatically opens a DOS-box and runs ASMSIM.BAT in the box.

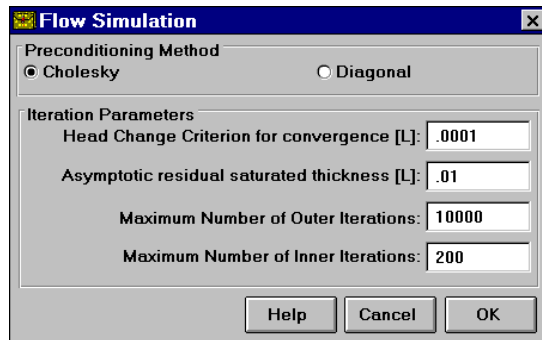

**Fig. 2.7** The Flow Simulation dialog box

#### Step 4.: Check Simulation Results and Produce Output

After a flow simulation is completed successfully, ASMWIN saves the results in files *pathfilename.xxx*. Where *path* is the directory in which your model data are saved, *filename* is the name of your model and *xxx* is an extension for the stress period number.

Note that there is one file for each stress period with extensions ".1" through ".n". These files contain among other data the spatial distribution of computed piezometer heads and Darcy velocities at the end of a pumping or time period. For a steady state computation only one result file with extension ".1" is created. These files are input files for the particle tracking model ASMPATH, the Random Walk transport model ASMWALK, the finite difference transport model, the Water Budget Calculator and the Graph Viewer.


To check the simulation results, ASMWIN provides a **Water Budget Calculator**, which computes water budgets for the entire model, user-specified subregions, and flows between adjacent subregions. A water budget provides an indication of the overall quality of the numerical solution. In numerical solution techniques, the system of equations solved by a model actually consists of a flow continuity statement for each model cell. Continuity should also exist for the total flows into and out of the entire model or a sub-region. This means that the difference between total inflow and total outflow should equal the total change in storage or be equal to zero for a steady-state flow field.


In addition to the **Water Budget Calculator**, ASMWIN provides various possibilities for checking simulation results and creating graphical output. Using the **Results Extractor**, simulation results of stress periods can be read from the result files and saved in ASCII Matrix files. An ASCII Matrix file contains a value for each model cell. The format of the ASCII Matrix file is described in Appendix 2. ASMWIN may also generate contour maps based on an ASCII Matrix file.

In the following, we will carry out the steps:

1. Use the **Water Budget Calculator** to compute water budgets of the entire model and subregions, and check if the percent discrepancies of in- and outflows are acceptably small.
2. Use the **Result Extractor** to read and save the calculated hydraulic heads.
3. Generate contour maps based on the calculated hydraulic heads saved in step 2.
4. Create a solid fill plot based on the calculated hydraulic heads saved in step 2 and add contours to the plot.
5. Use ASMPATH to produce pathlines and delineate the capture zone of the pumping well.

► **To calculate subregional water budgets**

1. Choose **Water Budget** from the **Tools** menu.  
The **Water Budget** dialog box appears (Fig. 2.8). Specify a file name for saving the calculation results.
2. Click **Zones**.  
A zone is a subregion of a model for which a water budget will be calculated. A zone is indicated by a zone number ranging from 0 to 50. A zone number must be assigned to each model cell. The zone number of 0 indicates that a cell is not associated with any zone. Follow the steps 3 through 5 to assign the zone number 1 to the contaminated area and the zone number 2 to the other area.
3. Choose **Matrix►Reset** from the **Value** menu (or press Ctrl+R), type 2 in the dialog box, then click **OK**.
4. Assign 1 to the cells in the contaminated area.
5. Choose **Leave Editor** from the **File** menu or click the **Leave Editor** icon 
6. Click **Go** in the **Water Budget** dialog box.

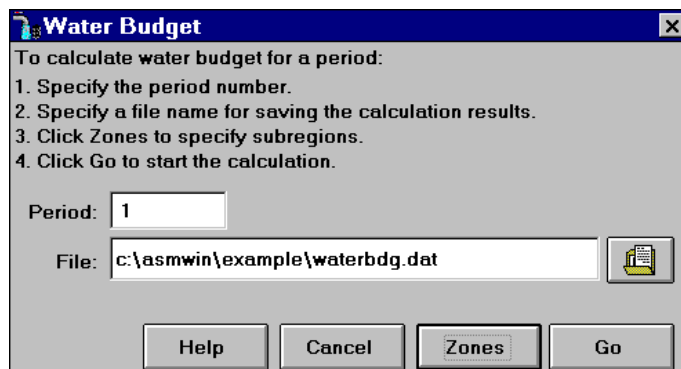

**Fig. 2.8** The Water Budget dialog box

ASMWIN calculates and saves the water budget in the specified file as shown in Table 2.1. The units of flows are  $[L^3/T]$ , where T is the time unit specified in the **Time Parameters** dialog box and L is the length unit. Flows are considered **IN**, if they are entering a zone. Flows between subregions are given in a flow matrix. Water budgets are calculated for each zone and each period. **HORIZ. EXCHANGE** gives the flows which flow horizontally across a zone's boundary.

The percent discrepancy is calculated by the equation (2.1)

$$\frac{100 \cdot (IN - OUT)}{(IN + OUT) / 2} \quad (2.1)$$

In this example, the percent discrepancies of in- and outflows for the model and each zone are acceptably small. This means the model equations are correctly solved.

```

-----
                        ASMWIN - WATER BUDGET
-----
FLOWS ARE CONSIDERED 'IN' IF THEY ARE ENTERING A SUBREGION
THE UNIT OF THE FLOWS IS [L^3/SECOND]

MODEL: C:\ASMWIN\EXAMPLE\SAMPLE.ASM
STEADY STATE SOLUTION

WATER BUDGET OF THE WHOLE MODEL DOMAIN

      FLOW TERM           IN           OUT           IN-OUT
STORAGE  0.000000E+00  0.000000E+00  0.000000E+00
CONSTANT HEAD  6.295397E-03  4.289134E-03  2.006263E-03
WELL     0.000000E+00  2.000000E-03 -2.000000E-03
LEAKAGE  0.000000E+00  0.000000E+00  0.000000E+00
BOUNDARY FLOW  0.000000E+00  0.000000E+00  0.000000E+00
RECHARGE 0.000000E+00  0.000000E+00  0.000000E+00
-----
SUM      6.295397E-03  6.289135E-03  6.262213E-06
DISCREPANCY [%]           0.10

SUBREGIONAL WATER BUDGET

ZONE  1
      FLOW TERM           IN           OUT           IN-OUT
STORAGE  0.000000E+00  0.000000E+00  0.000000E+00
CONSTANT HEAD  0.000000E+00  0.000000E+00  0.000000E+00
WELL     0.000000E+00  0.000000E+00  0.000000E+00
LEAKAGE  0.000000E+00  0.000000E+00  0.000000E+00
BOUNDARY FLOW  0.000000E+00  0.000000E+00  0.000000E+00
RECHARGE 0.000000E+00  0.000000E+00  0.000000E+00
HORIZ. EXCHANGE  1.496800E-03  1.497837E-03 -1.037028E-06
-----
SUM      1.496800E-03  1.497837E-03 -1.037028E-06
DISCREPANCY [%]           -0.07

ZONE  2
      FLOW TERM           IN           OUT           IN-OUT
STORAGE  0.000000E+00  0.000000E+00  0.000000E+00
CONSTANT HEAD  6.295397E-03  4.289134E-03  2.006263E-03
WELL     0.000000E+00  2.000000E-03 -2.000000E-03
LEAKAGE  0.000000E+00  0.000000E+00  0.000000E+00
BOUNDARY FLOW  0.000000E+00  0.000000E+00  0.000000E+00
RECHARGE 0.000000E+00  0.000000E+00  0.000000E+00
HORIZ. EXCHANGE  1.497837E-03  1.496800E-03  1.037028E-06
-----
SUM      7.793234E-03  7.785934E-03  7.299241E-06
DISCREPANCY [%]           0.09

```

FLOW MATRIX:

Element (I,J) of the following matrix gives the flow rate from zone I to zone J. Where I is the column index and J is the row index.

```

      1           2
-----
1  0.000000E+00  1.496800E-03
2  1.497837E-03  0.000000E+00

```

**Table 2.1** Output from the Water Budget Calculator

► **To read and save the calculated hydraulic heads**

1. Choose **Result Extractor** from the **Tools** menu.

The **Result Extractor** dialog box appears (Fig. 2.9). You can choose a result type from the **Result Type** drop-down box. Then specify the stress period number from which the result should be read. The spreadsheet displays a series of columns and rows. The intersection of a row and column is a cell. Each cell of the spreadsheet is corresponding to a model cell. By setting the **Save Format** option, the result can be optionally saved as an ASCII Matrix or a SURFER data file format.

Follow steps 2 through 6 to save the calculated hydraulic heads in the ASCII Matrix files H1.DAT.


2. Choose **Hydraulic Head** from the **Result Type** drop-down box.
3. Type 1 for the **Stress Period**.
4. Click **Read**.

Hydraulic heads of stress period 1 will be read and put into the spreadsheet. You can scroll the spreadsheet by clicking on the scrolling bars next to the spreadsheet.

5. Click **Save**.

A **Save Matrix As** dialog box appears. Specify the file name H1.DAT and select a directory in which H1.DAT should be saved. Click **OK** when ready.

6. Click the **Cancel** button to close the dialog box.

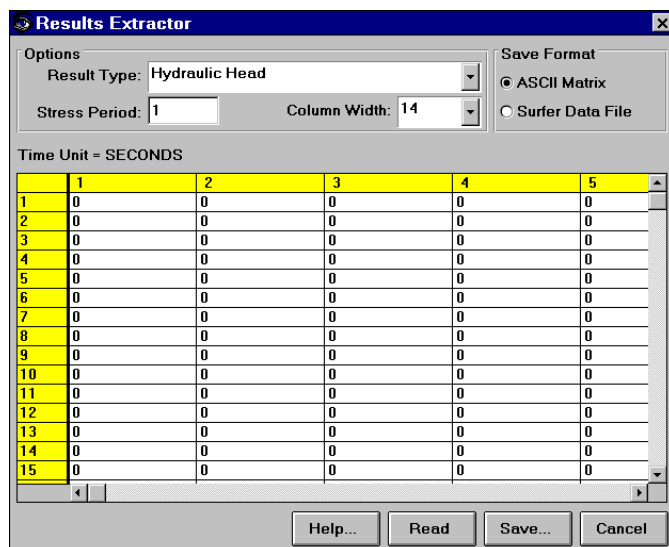

**Fig. 2.9** Result types and the **Results Extractor** dialog box.



► **To generate contour maps of the calculated heads**

1. Choose **Recycle** from the **Tools** menu


Data specified in **Recycle** will not be used by any simulation program. We can use **Recycle** to save temporary data or to display simulation results graphically.

2. Choose **Matrix►Browse** from the **Value** menu (or Press Ctrl+B).

The **Browse Matrix** dialog box appears (Fig. 2.10). Each cell of the spreadsheet corresponds to a model cell. You can load an ASCII Matrix file into the spreadsheet or save the spreadsheet in an ASCII Matrix file by clicking **Load** or **Save**. Alternatively you could

- call the results extractor, read the head results again, and apply them to the Recycle matrix.
3. Click **Load**.  
The **Load Matrix** dialog box appears (Fig. 2.11).
  4. Click  and select file H1.DAT to be loaded (H1.DAT was saved earlier by the **Results Extractor**). Click **OK** when ready.  
H1.DAT is loaded and put into the spreadsheet.
  5. In the **Browse Matrix** dialog box, click **OK**.  
The **Browse Matrix** dialog box will be closed.
  6. Choose **Environment** from the **Options** menu (or Press Ctrl+E).  
The **Environment Options** dialog box appears (Fig. 2.12). It allows the user to modify the appearance and position of the model grid.
  7. In the **Environment Options** dialog box, check the **Visible** check box of the Contours group, click the color button next to the **Visible** check box to select an appearance color for the contours. Note that ASMWIN will clear the **Visible** check box when you leave the Editor.
  - 8.. In the **Environment Options** dialog box, Click **OK**.  
ASMWIN will redraw the model and display the contours (Fig. 2.13).
  9. To save the graphics, choose **Save Plot As** from the **File** menu and specify a plot format and file name in the **Save Plot As** dialog box (Fig. 2.14).
  10. Choose **Leave Editor** from the **File** menu or click the **Leave Editor** icon  and click **Yes** to save changes to Recycle.

Using the above procedure, you can generate contour maps of your input data, results data, or any data saved as an ASCII Matrix file of the same dimensions. For example, you can create a contour map of the initial heads or you can use the **Result Extractor** to read the concentration distribution from a transport simulation and display the corresponding contours. You may also generate contour maps of the fields created by the **Field Interpolator** or **Field Generator**. See chapter 5 for details about the **Field Interpolator** and **Field Generator**.

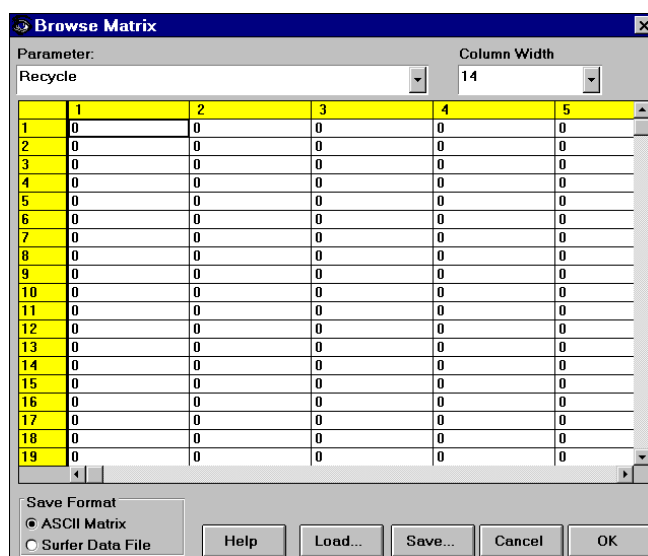

**Fig. 2.10** The **Browse Matrix** dialog box with the cell values in the spreadsheet

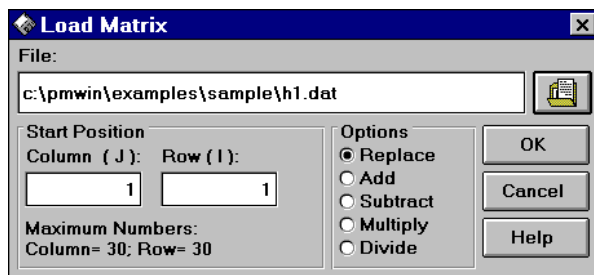


Fig. 2.11 The Load Matrix dialog box

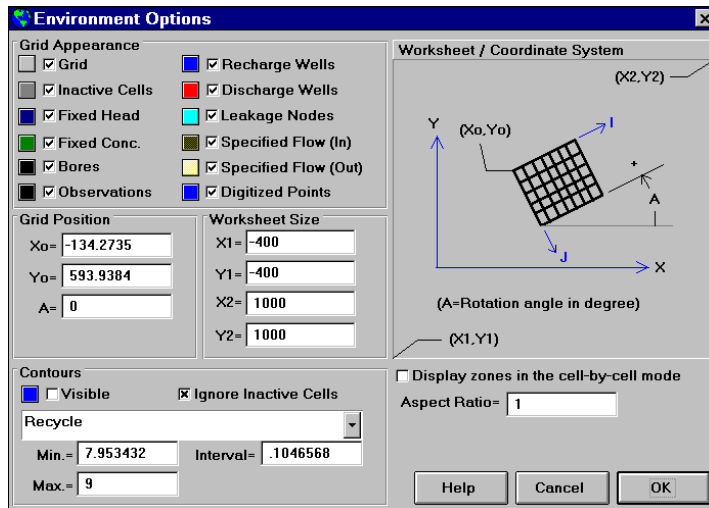


Fig. 2.12 The Environment Options dialog box


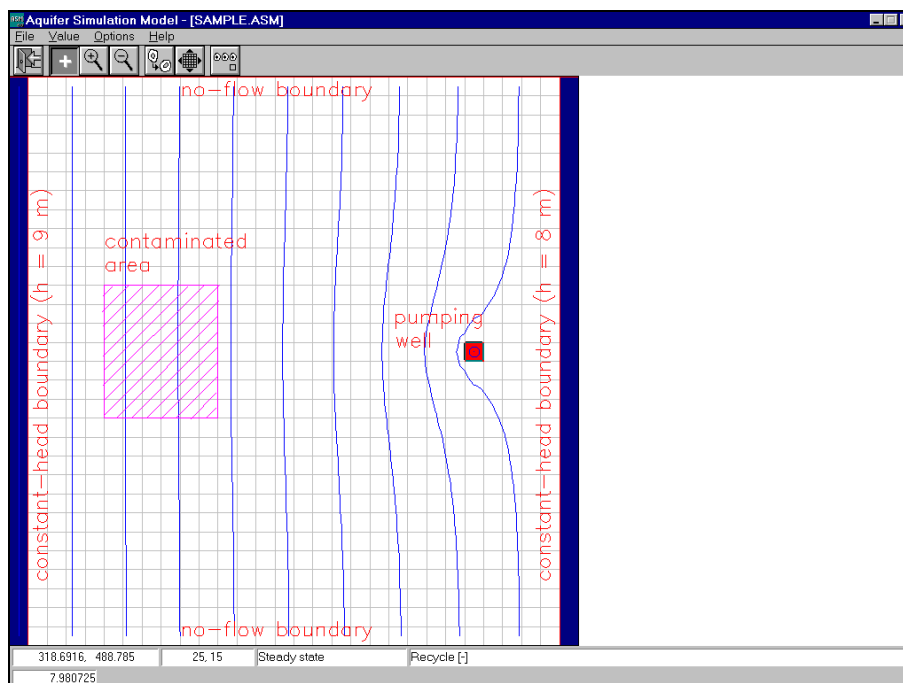


Fig. 2.13 A contour map of the calculated hydraulic heads

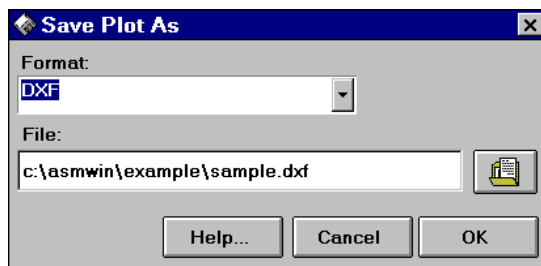

**Fig. 2.14** The **Save Plot As** dialog box for saving graphics in different formats


► **To create solid fill plots**

1. Choose **Recycle** from the **Tools** menu

Note that data specified in **Recycle** will not be used by any simulation programs. We can use **Recycle** to save temporary data or to display simulation results graphically.

2. Repeat steps 2 through 5 of the previous procedure to load H1.DAT into the model grid. Skip these steps, if the data were saved in the previous procedure.
3. Choose **Search and Modify** from the **Value** menu.

The **Search and Modify** dialog box appears (Fig. 2.15). If a row of the table is active, model cells with values located between the Minimum and Maximum values will be filled with the user-specified Color.

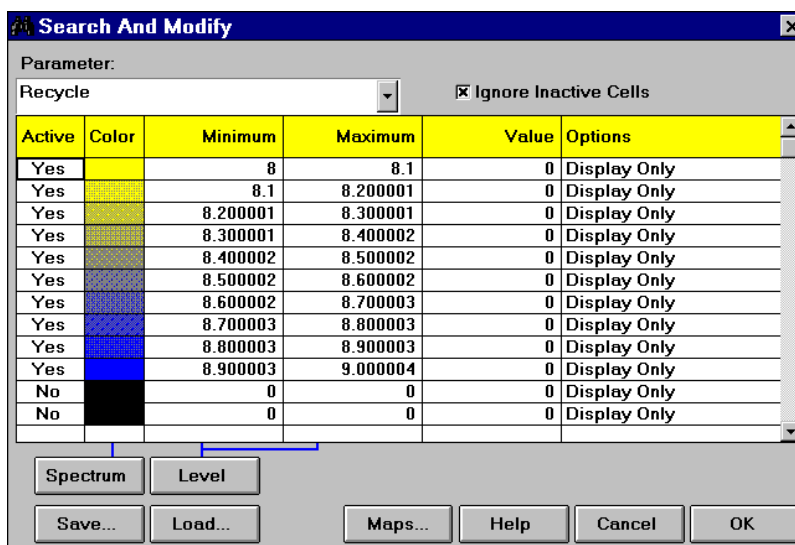


**Fig. 2.15** The **Search and Modify** dialog box for creating solid fill plots


4. Set the first 10 rows to active by clicking on cells of the Active-column. A row is active, if Active is set to Yes.
5. To assign colors to the active rows, click Spectrum. The **Color Spectrum** dialog box appears (Fig. 2.16).
6. In the **Color Spectrum** dialog box, click on the Minimum button and select a color. Click on the Maximum button and select a color. Click OK, when finished.
7. To set the search ranges, click Level. The **Search Level** dialog box appears (Fig. 2.17).
8. In the **Search Level** dialog box, type 8 and 9 in the Minimum and Maximum edit fields.

Click **OK** when ready.

9. In the **Search And Modify** dialog box, click **OK**.  
ASMWIN redraws the model and fills colors to cells.

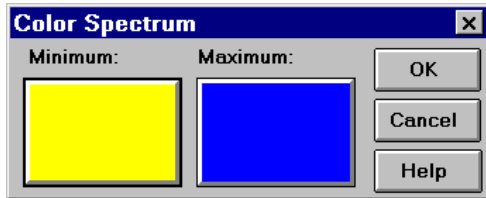

**Fig. 2.16** The **Color Spectrum** dialog box for assigning colors

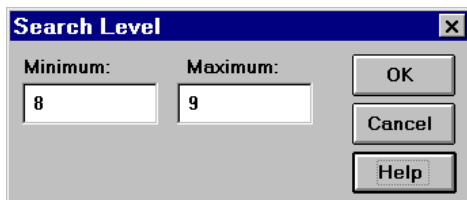


**Fig. 2.17** The **Search Level** dialog box

You can overlay contours on the solid fill plot by doing the following

1. Choose **Environment** from the **Options** menu, check the **Visible** check box, then click **OK**.
2. Choose **Search and Modify** from the **Value** menu, then Click **OK**.

Fig. 2.18 shows a solid fill plot with contour lines

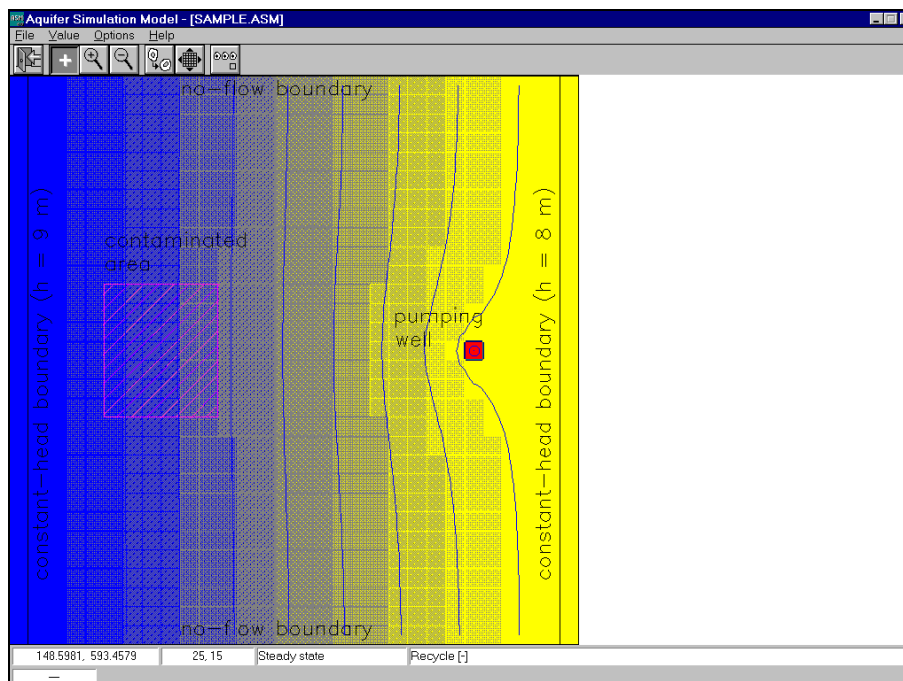


**Fig. 2.18** Solid fill plot with contour lines

► **To calculate the capture zone of the pumping well**

1. Choose **Pathlines** from the **Run** menu.

ASMWIN calls the particle tracking model ASMPATH and the current model will be loaded into ASMPATH automatically.

Note that if you subsequently modify and calculate a model within ASMWIN, you must load the modified model into ASMPATH again to ensure that the modifications can be recognized by ASMPATH. To load a model, click  and select a model file with the extension ASM from the **Open Model** dialog box.

2. To calculate the capture zone of the pumping well:

a. Click the **Set Particles** button 


b. Move the mouse cursor to the model area. The mouse cursor turns into crosshairs.

c. Point the crosshairs at the upper-left corner of the pumping well, as shown in Fig. 2.19.

d. Drag the crosshairs until the window covers the pumping well.


e. Release the mouse button.

The **Particle Placement** dialog box appears. Assign the numbers of particles to the edit fields in the dialog box as shown in Fig. 2.20. When finished, click **OK**.

f. Click  to start the backward particle tracking.

ASMPATH calculates and shows the projections of the pathlines as well as the capture zone of the pumping well (Fig. 2.21).

ASMPATH allows you to create time-related capture zones or isochrons of pumping wells. The 100-days-capture zone or 100-days-isochron shown in Fig. 2.23 is created by putting particles around the pumping well, using the settings in the **Particle Tracking Options** dialog box as shown in Fig. 2.22, and clicking .

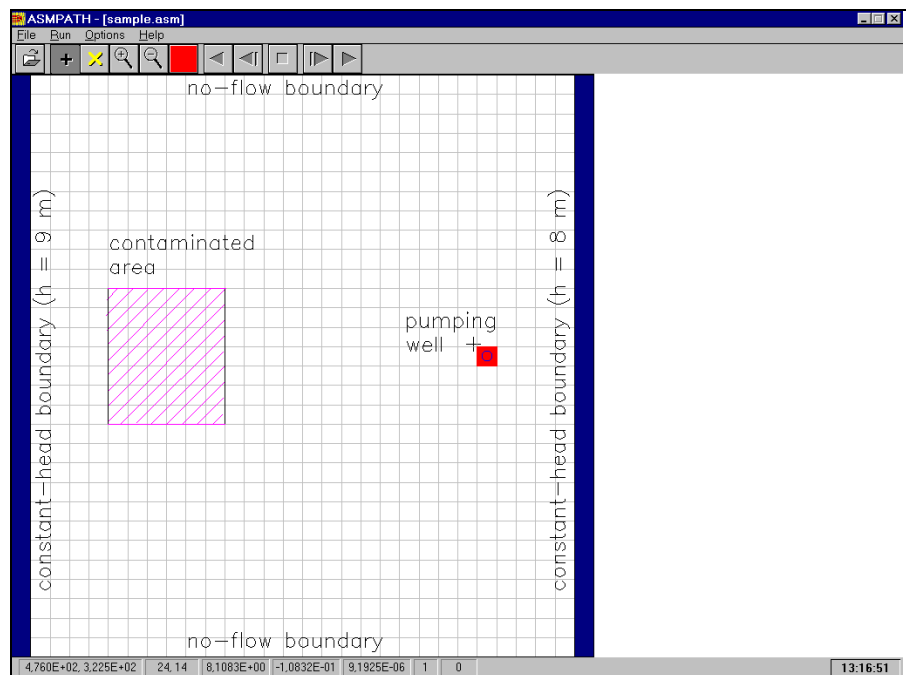

**Fig. 2.19** The sample model loaded in ASMPATH

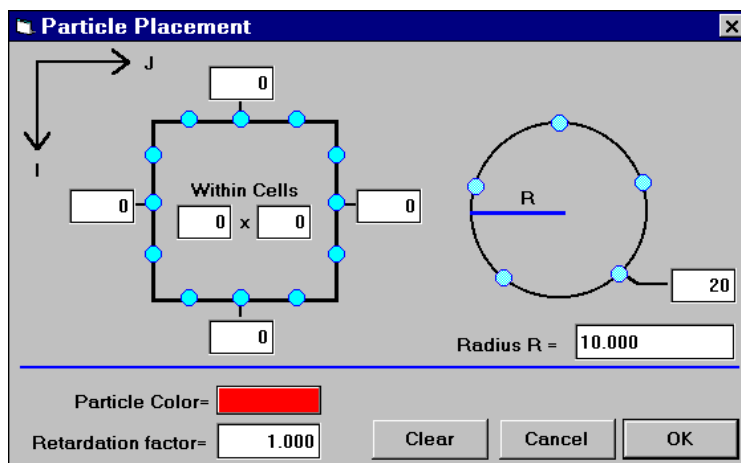


Fig. 2.20 The Particle Placement dialog box

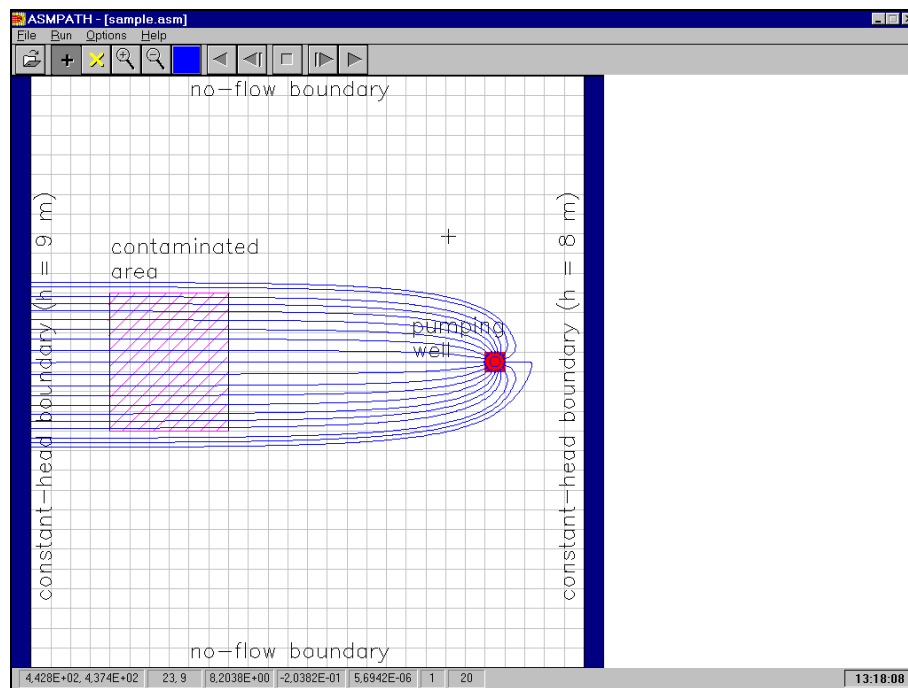


Fig. 2.21 The capture zone of the pumping well

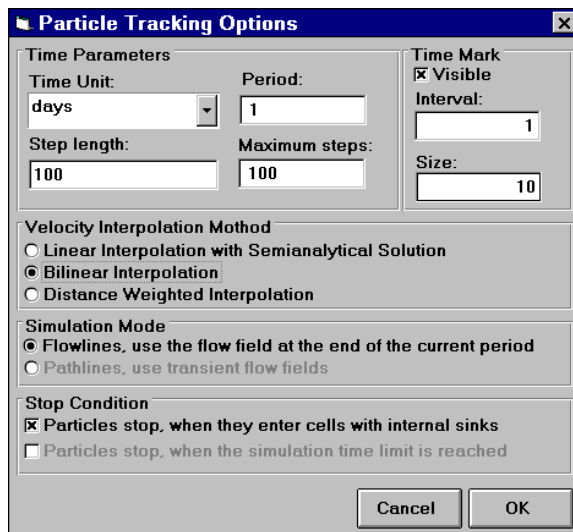


Fig. 2.22 The Particle tracking options dialog box

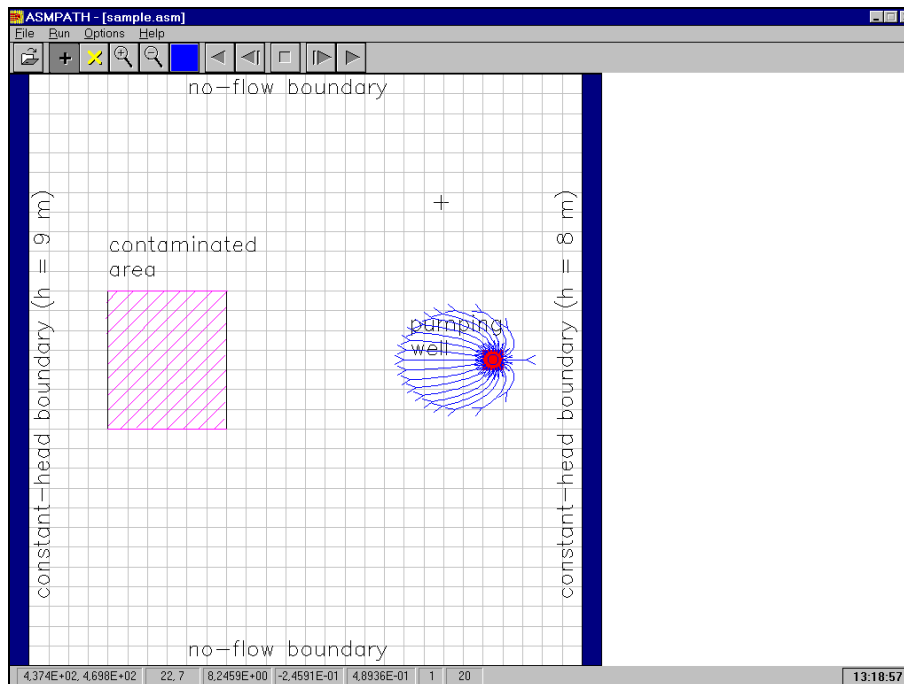


Fig. 2.23 100-days-capture zone calculated by ASMPATH

## 2.2 Simulation of Solute Transport

To demonstrate the use of the transport models, we assume that the pollutant is dissolved into groundwater at a rate of  $1 \times 10^{-4} \mu\text{g/s/m}^2$ . The longitudinal and transverse dispersivities of the aquifer are 10 m and 1 m, respectively. The retardation factor is 2. The initial concentration, molecular diffusion coefficient, and decay rate are assumed to be zero.


The breakthrough curves (concentration versus time) at the cells [15, 15], [20, 15] and [25, 15] and the concentration distribution after 2.5 years should be calculated.

Transport models are based on the calculated flow field. Before going to the next step, make sure that the flow simulation has been performed.


### 2.2.1 Perform the transport simulation with ASMT2SIM

Prior to running ASMT2SIM, you have to specify the basic boundary conditions of the transport model, the observation points and the initial concentration. Similar to the flow model, you specify a code for each model cell which indicates whether (1) solute concentration varies with time (active concentration cell), (2) the concentration is kept fixed at a constant value (constant-concentration cell), or (3) the cell is an inactive concentration cell. Use 1 for an active concentration cell, -1 for a constant-concentration cell, and 0 for an inactive concentration cell. Active, variable-head cells can be treated as inactive concentration cells to minimize the area needed for transport simulation, as long as the solute concentration is insignificant near those cells.


► **To assign the boundary condition to the finite difference transport model**

1. Choose **Boundary Conditions ► Transport Model** from the **Grid** menu.  
ASMWIN shows the model grid. The default value for all cells is 1.
2. Choose **Leave Editor** from the **File** menu or click the Leave Editor icon 

► **To define observation points**

1. Choose **Observation Points** from the **Grid** menu.  
ASMWIN shows the model grid. An observation point is indicated by the cell value 1.
2. Assign 1 to the cells [15, 15], [20, 15] and [25, 15].
3. Choose **Leave Editor** from the **File** menu or click the Leave Editor icon 

► **To set the initial concentration**

1. Choose **FD-Transport ► Initial Concentration** from the **Parameters** menu.  
The default value for all cells is 0.
2. Choose **Leave Editor** from the **File** menu or click the Leave Editor icon 

► **To assign the input rate of contaminants**

1. Choose **FD-Transport ► Input rate of contaminants** from the **Parameters** menu.  
ASMWIN displays the model grid.
2. Assign 0.04 [ $\mu\text{g/s}$ ] to the cells within the contaminated area.  
This value is the input rate of contaminants for each cell. Since the area of each cell is 400 [ $\text{m}^2$ ] and the dissolution rate is  $1 \times 10^{-4}$  [ $\mu\text{g/s/m}^2$ ], the input rate of the pollutant to the

aquifer is equal to  $400 \text{ [m}^2\text{]} \cdot 1 \times 10^{-4} \text{ [\mu g/s/m}^2\text{]} = 0.04 \text{ [\mu g/s]}$ .


► **To perform the transport simulation**

1. Choose **Transport ► Finite Difference** from the **Run** Menu.

The **Transport - Finite Difference** dialog box appears (Fig. 2. 24). It allows the user to specify the necessary parameters and the simulation time.

2. Click **OK** to start the transport simulation.

Prior to running the transport simulation, ASMWIN will use user-specified data to generate an input file for the module ASMT2SIM.EXE. In addition, ASMWIN creates a batch file ASMTRPT.BAT in the model directory. After having generated these files, ASMWIN automatically opens a DOS-box and runs ASMTRPT.BAT in the box.

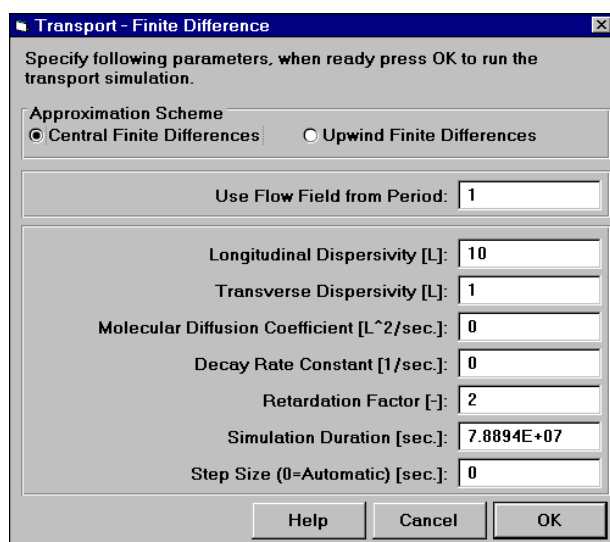

**Fig. 2.24** The **Transport - Finite Difference** dialog box


► **Check simulation results and produce output**


If a simulation is successfully completed, ASMT2SIM saves the calculated concentration distribution in the file *path\filename.cxy* and the concentration versus time data in the file *path\filename.cvt*. Where *path* is the directory in which your model data are saved and *filename* is the name of your model.

Based on the result files, ASMWIN can generate contour maps or concentration versus time curves.

► **To generate contour maps of the calculated concentration**


1. Choose **Recycle** from the **Tools** menu  
Data specified in **Recycle** will not be used by any simulation program. We can use **Recycle** to save temporary data or to display simulation results graphically.
2. Choose **Result Extractor** from the **Value** menu.
3. Choose **Concentration** from the **Result Type** drop-down box.
4. Click **Read**.  
The calculated concentration will be read and put into the spreadsheet.

5. Click **Apply & Close**.  
The data is applied to the Recycle matrix.
6. Choose **Environment** from the Options menu (or Press Ctrl+E).  
The **Environment Options** dialog box appears.
7. In the **Environment Options** dialog box, check the **Visible** check box of the **Contours** group, click the color button next to the **Visible** check box to select an appearance color of the contours. Note that ASMWIN will uncheck the **Visible** check box when you leave the Editor.
8. In the **Environment Options** dialog box, Click **OK**.  
ASMWIN will redraw the model and display the contours (Fig. 2.25).
9. Choose **Leave Editor** from the **File** menu or click the **Leave Editor** icon  and click **Yes** to save changes to Recycle.

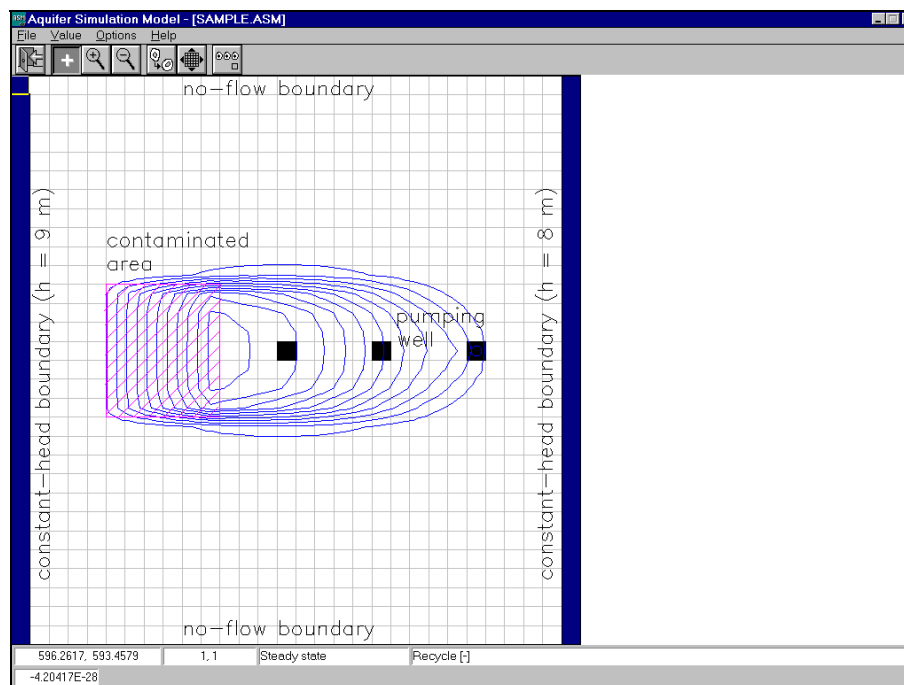

**Fig. 2.25** A contour map of the calculated concentration

- ▶ **To generate concentration versus time curves**
1. Choose **Graphs ▶ Concentration - Time (FD)** from the **Tools** Menu.  
The Graph Viewer (see section 5.6) will be loaded and the concentration-time curves at the observation points will be displayed (Fig. 2.26).
  2. Click **Close** to leave the Graph Viewer.

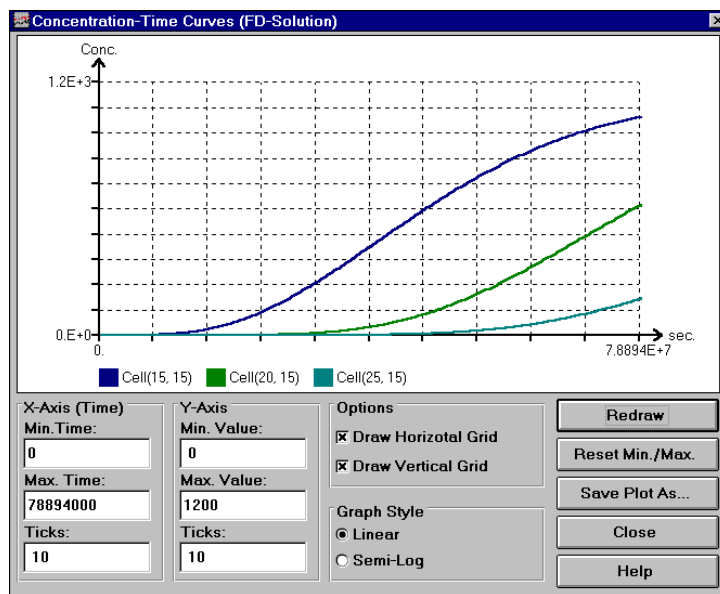


**Fig. 2.26** The Graph Viewer showing concentration-time curves

### 2.2.2 Perform a random walk transport simulation with ASMWALK

To start ASMWALK, choose **Transport ► Random Walk** from the **Run** menu. ASMWALK calls the Random Walk transport model ASMWALK and the current model will be loaded into ASMWALK automatically.

Note that if you subsequently modify and calculate a model within ASMWALK, you must load the modified model into ASMWALK again to ensure that any modifications are recognized by ASMWALK.

To load a model, click  and select a model file with the extension ASM from the Open Model dialog box.

The Random Walk method requires time parameters, transport parameters and the initial distribution of particles. A fixed mass (or mass injection rate) is assigned to each particle. The sum over all particle masses (or injection rates) constitutes the total amount of pollutant injected into the aquifer.

#### ► To assign time parameters


1. Choose **Time Parameters & Velocity** from the **Options** menu.  
The **Time Parameters and Velocity Interpolation** dialog box appears (Fig. 2.27).
2. Select Seconds as the time unit. Set Step Length to 1314900 s and Max. Steps to 60.
3. Select Permanent mass injection type.
4. Click OK to close the dialog box.

#### ► To specify transport parameters and initial distribution of particles


1. Move the mouse cursor to the model area. The mouse cursor turns into a crosshairs.
2. Place the crosshairs at the upper-left corner of the contaminated area.
3. Drag the crosshairs until the window covers the contaminated area then release the mouse button.

The **Particle and Transport Parameters** dialog box appears (Fig. 2.28).

4. Assign the numbers of particles to the edit fields in the dialog box as shown in the figure. When finished, click **OK**.  
 ASMWALK assigns 16 ( $= 4 \times 4$ ) particles to each cell within the contaminated area. Each particle has a mass injection rate of 0.0025 [ $\mu\text{g/s}$ ]. This yields an injection rate of 0.04 [ $\mu\text{g/s}$ ] for each cell.

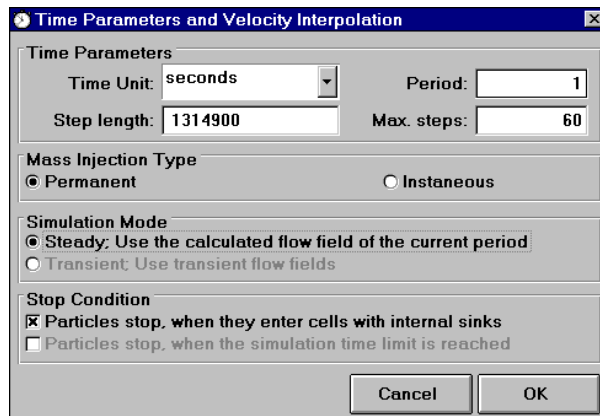

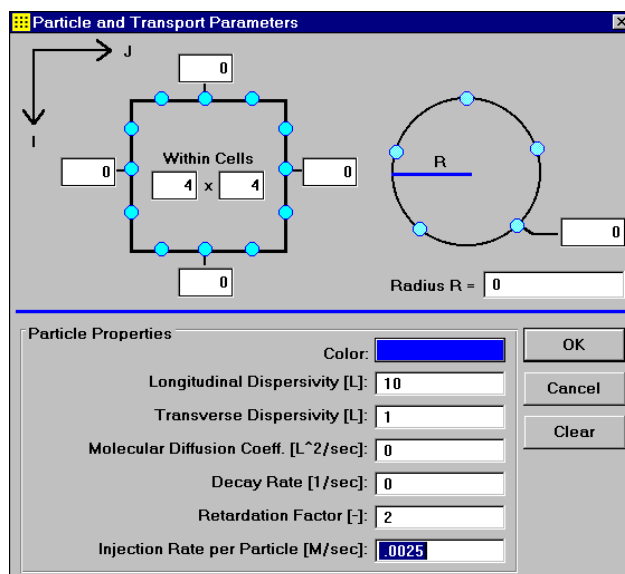

**Fig. 2.27** The **Time Parameters and Velocity Interpolation** dialog box




**Fig. 2.28** The **Particle and Transport Parameters** dialog box

► **To perform the transport simulation**


- Click  to start the transport simulation.  
 ASMWALK shows the position of the particles and calculates the concentration in each cell for each transport step. The step number and total elapsed time are shown in the tool bar. The simulation stops when the maximum number of transport steps is reached or when all particles have been removed by sinks. If you click , the simulation will be stopped at the end of the current transport step.

► **To generate contour maps of the calculated concentration**

1. Choose **Environment** from the **Options** menu.  
The **Environment Options** dialog box appears (Fig. 2.29)
2. Check the Visible check box of the Contours group and select the option conc. You can specify the format and size of the contour labels, see Sec. 4.1.3 for details.
3. Click **OK**.  
ASMWALK will then redraw the model and display the final position of the particles and the concentration contours (Fig. 2.30).

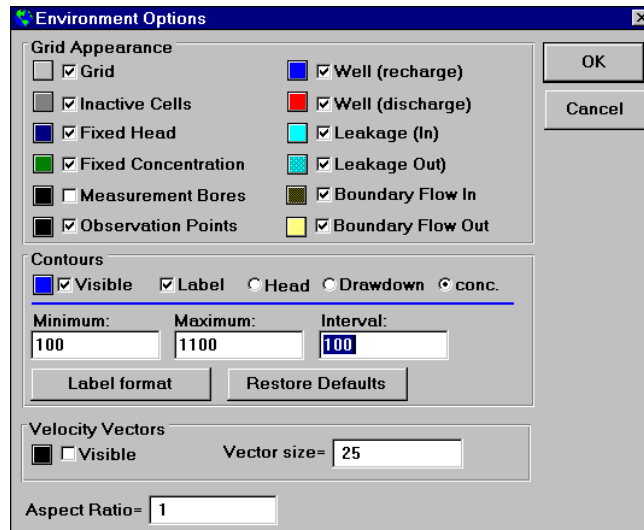


**Fig. 2.29** The Environment Options dialog box

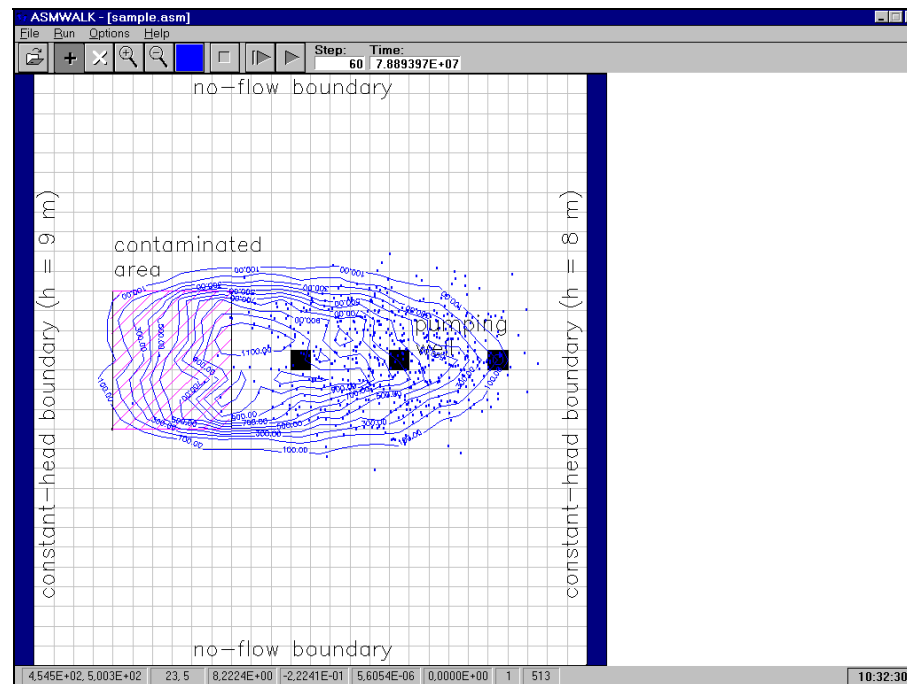

**Fig. 2.30** A contour map of the calculated concentration

- ▶ **To generate concentration versus time curves**
- 1. Choose **Concentration-Time Curves ▶ Display** from the **Options** Menu. The **Graph Viewer** appears and shows the curves (Fig. 2.31).
- 2. Click Close to leave the **Graph Viewer**.

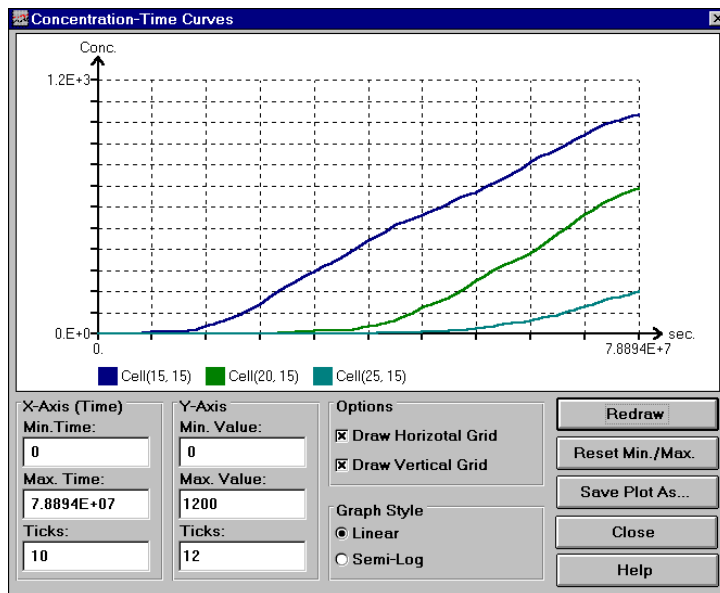

**Fig. 2.31** The **Graph Viewer** showing concentration-time curves

### 2.3 Automatic Calibration

In ASMWIN, the conductivities (transmissivities or hydraulic conductivities) or the fluxes (boundary fluxes, groundwater recharge from precipitation and leakage fluxes) in a steady-state flow model can be adjusted by automatic calibration module (ASMOPTI). To demonstrate the use of this module, we assume that the hydraulic conductivity of the entire model is homogeneous but its value is unknown. We want to calibrate this value. There are four observation points with the coordinates and the observed hydraulic heads listed below.

Observation	X-coordinate	Y-coordinate	Hydraulic head
P1	130	200	8.778
P2	200	400	8.662
P3	480	250	8.124
P4	460	450	8.195

Three steps are required for an automatic calibration:


1. Assign the zonal structure of each parameter.  
Automatic calibration requires a subdivision of the model domain into a small number of reasonable zones of equal parameter values. The zonal structure is given by assigning to each zone a parameter number in the **Data Editor**.
2. Specify the starting values for each parameter.
3. Specify the observation points and the measured hydraulic heads.

► **To assign the zonal structure to hydraulic conductivity**


1. Choose **Hydraulic Conductivity** from the **Parameters** Menu.
2. Choose **Matrix►Reset** from the **Value** menu (or press Ctrl+R).  
The **Reset Matrix** dialog box appears (Fig. 2.32).
3. Type 1 in the Parameter Number edit box, then click **OK**.  
The entire model is set to parameter 1.


Note that ASMOPTI does not use the specified value for **Hydraulic Conductivity** of this dialog box. Instead, ASMOPTI uses the starting value of each parameter as given in the **Parameter List** dialog box (see below) which subsequently is varied iteratively in order to obtain the optimal value yielding the best fit of observed head data.

4. Choose **Leave Editor** from the **File** menu or click the **Leave Editor** icon 

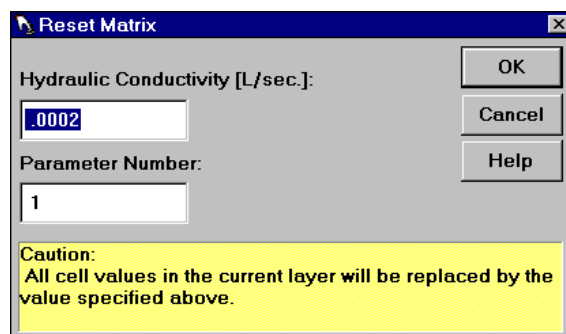

**Fig. 2.32** The **Reset Matrix** dialog box

- ▶ **To specify starting values for the each parameter**
- 1. Choose **Calibration▶Parameter List** from the **Parameters** menu (choose **Parameter List** from the **Value** menu, if you are in the **Data Editor**).  
The **Parameter List** dialog box appears (Fig. 2.33).
- 2. Make the first parameter active by clicking on the cell of the Active-column.  
A parameter will be automatically calibrated, if Active is set to Yes.
- 3. Assign an initial value (e.g., 0.0001 m/s) and the lower and upper bounds to the parameter.  
The option for constraining the fit parameters can be switched on using Use upper and lower bounds. It is suggested to look for an unconstrained solution first.
- 4. If you are in the **Data Editor**, choose **Leave Editor** from the **File** menu or click the Leave Editor icon 

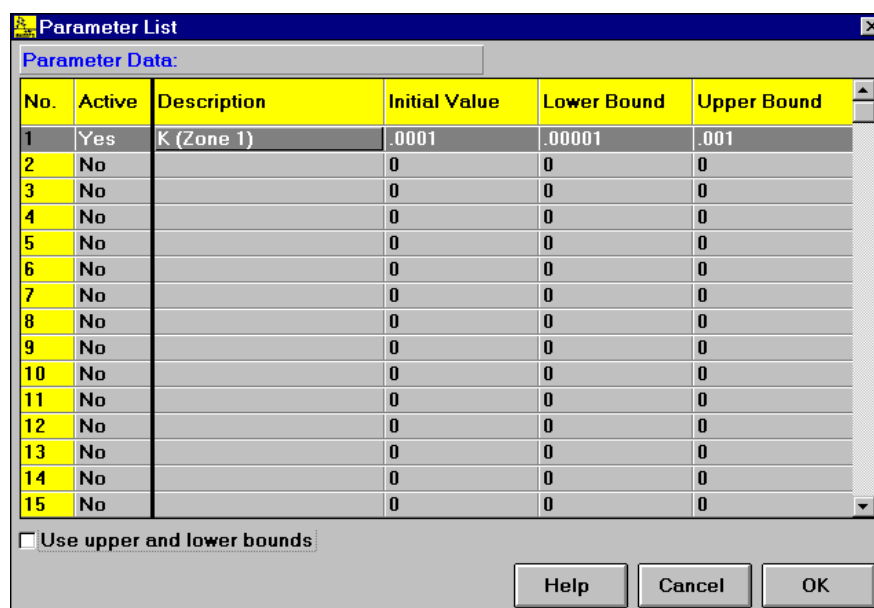

**Fig. 2.33** The **Reset Matrix** dialog box

- ▶ **To specify the observation points and the measured hydraulic heads**
- 1. Choose **Calibration▶Bores and Measurements** from the **Parameters** menu.  
The **Bores and Measurements** dialog box appears (Fig. 2.34).
- 2. Set the first four boreholes to active by clicking on the cell of the Active-column.  
The measured hydraulic head of a borehole will be used for the automatic calibration, if Active is set to Yes.
- 3. Assign the measured heads and x- and y-coordinates to each borehole.
- 4. Click OK to close the dialog box.

No.	Name	Active	x	y	Observed Head
1	P1	Yes	130	200	8.788
2	P2	Yes	200	400	8.662
3	P3	Yes	480	250	8.124
4	P4	Yes	460	450	8.195
5	5	No	0	0	0
6	6	No	0	0	0
7	7	No	0	0	0
8	8	No	0	0	0
9	9	No	0	0	0
10	10	No	0	0	0
11	11	No	0	0	0
12	12	No	0	0	0
13	13	No	0	0	0
14	14	No	0	0	0
15	15	No	0	0	0
16	16	No	0	0	0
17	17	No	0	0	0
18	18	No	0	0	0

Fig. 2.34 The **Bores and Measurements** dialog box

► **To Perform the Automatic Calibration**

1. Choose **Calibration** from the **Run** menu.

The **Calibration** dialog box appears (Fig. 2.35). It allows the user to specify the convergence criteria for the iterative equation solver and the optimization parameters for the Marquardt-Levenberg algorithm.

2. Click **OK** to start the calibration.

Prior to running the automatic calibration, ASMWIN will use user-specified data to generate a main input file, a zone-identification file (which describes the zonal structure) and an observation file (which contains the measurement points and measured values) for ASMOPTI. In addition, ASMWIN generates a batch file ASMOPTI.BAT in the model data directory. After having generated these files, ASMWIN automatically opens a DOS-box and runs ASMOPTI.BAT in the box.

Fig. 2.35 The **Calibration** dialog box

► **Check Calibration Results**

During the automatic calibration several result files are created. The file with extension **.PRF** records the single steps of parameter optimization and the optimization results (Table 2.2). The file with extension **.1** contains the result of the final flow simulation. It has the same form as the result file in a flow simulation without optimization with the difference that now the flow simulation is based on the optimized parameters.

```

-----
                        OPTIMIZATION RESULTS
-----

Optimized parameters:
-----
Hydraulic conductivity [L/SEC.]:  1 Zone(s)
Zone   1 Parameter No.=   1 Value= 5.04360E-04

Comparison:
Observation      Observed      Calculated   Residual
Name             value          value
-----
1                8.788000      8.788355    -0.000355
2                8.662000      8.662092    -0.000092
3                8.124000      8.125015    -0.001015
4                8.195000      8.195501    -0.000501

Statistics:
-----
No. of optimization iterations:          5
Criterion for convergence:                0.000500
Mean squared deviations:                  0.000000
Sum of squared deviations:                 0.000001
Lambda:                                   0.000320
Max. deviation:                           -0.000092      2
Min. deviation:                           -0.001015      3
Mean deviation:                            -0.000491

```

**Table 2.2** A part of the optimization result file **.PRF**

You can create a scatter diagram to present the calibration result. The observed head values are plotted on one axis against the corresponding calculated values on the other.

- **To create a scatter diagram**
- Choose **Graphs►Scatter Diagram (Calibration)** from the **Tools** menu. ASMWIN shows the scatter diagram (Fig. 2.36). See Sec. 5.6 for details about the use of this dialog box.

Choosing **Recycle** from the **Tools** menu, you can create a plot showing the observed heads and calculated heads at the observation boreholes (Fig. 2.37).

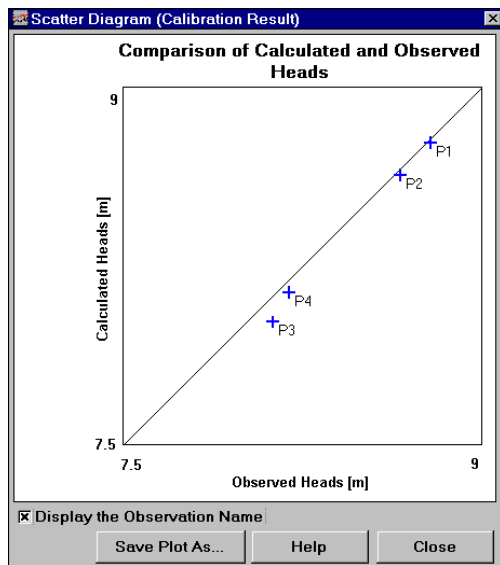


Fig. 2.36 The Graph Viewer showing a scatter diagram

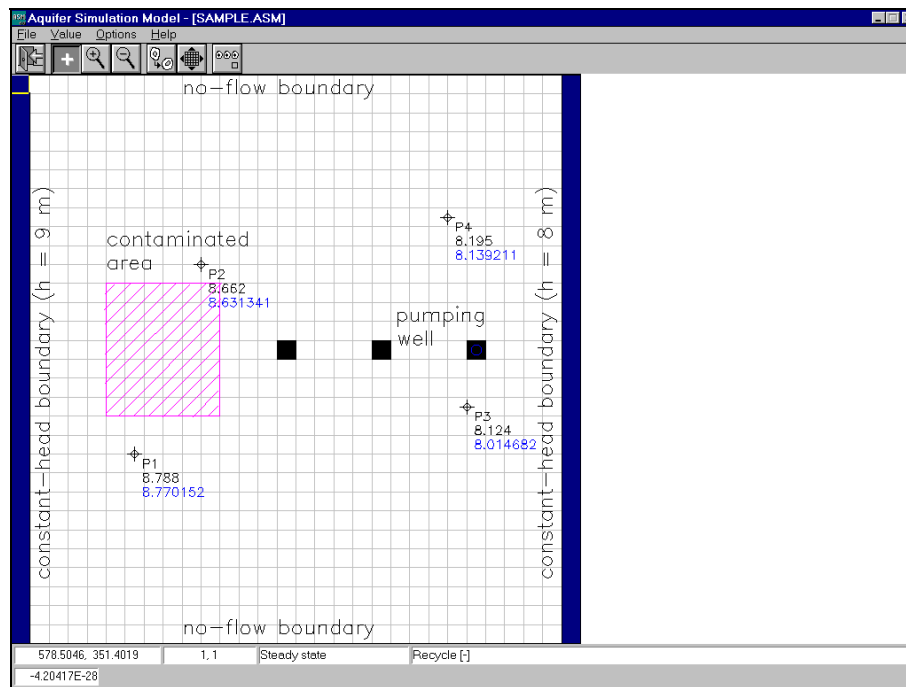


Fig. 2.37 The Recycle tool showing the observed and calculated heads at the boreholes.